



HydroSpin™ Installation Instructions/Warranty Information

Hand-Held Shower Massage Kit


Caution: *Protect finish from wrench marks with cloth or tape.*

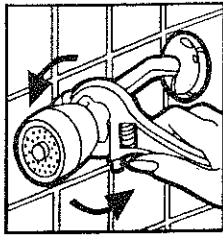


1. Remove old showerhead with wrench. Clean threads of shower arm.

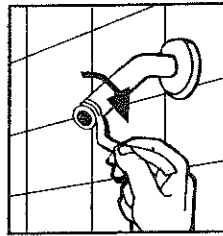


2. Apply pipe thread tape to threads of shower arm.

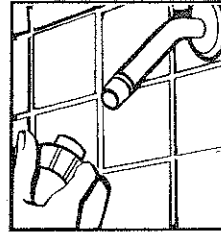


3. Insert screen washer into mounting bracket and hand tighten mounting bracket onto shower arm.

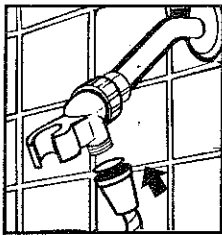

4. Place washer into hose end and hand tighten hose to shower arm mounting bracket.

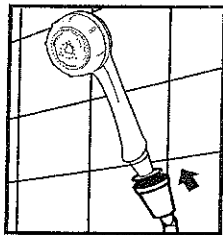

5. Place washer into other end of hose and hand tighten hose to shower.

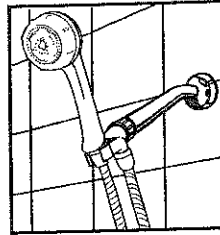

6. Fit hand shower into mounting bracket by slipping hose through the bracket opening and seating the hand shower into the bracket.

At low water PSI levels, the function of the HydroSpin setting may be affected.

Limited 5 Year Warranty

This HydroSpin product is warranted to be free from defects in material and workmanship for 5 years from the date of purchase. The Waxman Consumer Group will replace FREE OF CHARGE, under the warranty conditions, the entire unit or any part (at our option) which proves defective under normal installation, use and service. This warranty is limited to defective parts as stated. Additional labor charges and/or damage incurred in installation, repair or replacement, as well as incidental and consequential damages, therewith are excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Any damage to this shower massager as a result of misuse, abuse, neglect, accident, improper installation, or any use violating instructions furnished by us, WILL VOID THIS WARRANTY. Problems associated with hardwater buildup and/or water supply sediment are not covered under this warranty. To obtain warranty service, send product, not original receipt to: The Waxman Consumer Group, 24455 Aurora Road, Bedford Heights, Ohio 44146